


The Finial Company

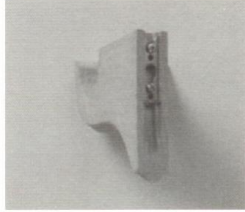


STEP 1

LOOSEN SCREWS 1/4 TURN.

REMOVE METAL BRACKET FROM
BACK OF POLE BRACKET.


Ceiling

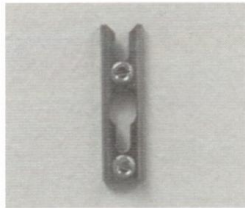

Floor

STEP 2

MOUNT THE METAL BRACKET TO
THE WALL.

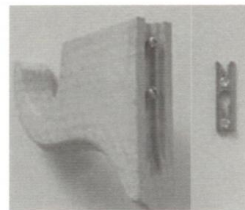

STEP 3

HANG POLE BRACKET ONTO THE
METAL BRACKET, PLACING THE
SCREWS INTO THE KEYHOLE
SLOTS.